 


INSTRUCTIONS

The **SOLAR SHOWER** is thought to be installed in open spaces where it can be exposed to sun light for the maximum possible time. As the Shower can very quickly capture the temperature outside, it can also be used on cloudy days with temperatures over 25 °C. Although any position is valid for the Shower to function properly, it is advisable to orientate its position according to the sun. This is shown in figure "A". This way you will obtain best performance.

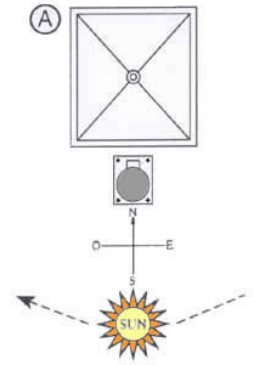

INSTALLATION


1 - Put the shower in the chosen place, in a vertical position on a flat and firm surface, Indicate with a marker the four holes of holes of holding board on the surface that is indicated.

2 - Remove the shower, placing it horizontally on a safe surface, so as not to damage it and drill the 60 mm deep holes marked on the surface of your choice with a 12 mm diameter drill.

3 - Bring the Shower back to its vertical position on the holes just made, introduce the four plastic studs enclosed, with a plastic hammer hammer or some other soft device that won't damage the holding board.

4- Once you place the studs until they reach the top level of the board, screw the nails slightly inserting the flat washers that are included in the package.

5- Put the shower head with a 28 mm key.

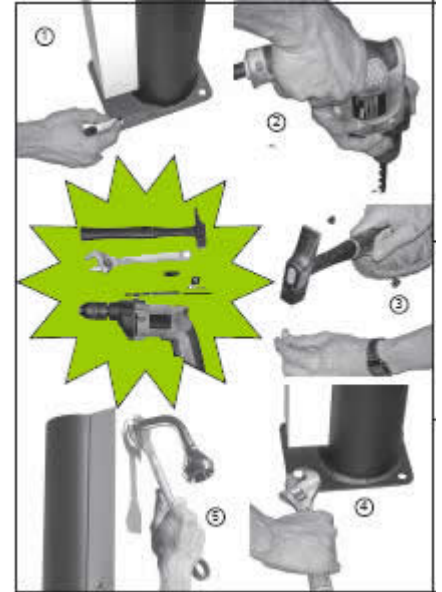


If the Shower is not completely vertical, you can bring it to the right level by pushing it with your hands from a higher level, since the board can be adjusted a few millimetres. The Holding Board on the fixing nails can be concealed with tile so as to provide a nicer finish when the shower is installed on tiled surfaces. It is important to install a stopcock before the connexion to have the possibility in winter to keep out the shower or to empty the water without the necessity of closing others valves.

OPERATION INSTRUCTIONS

Once the Shower is installed and connected to the main water supply, the red tap for hot water must be turned on until water comes out of the faucet. Then turn off the tap and the Shower will be ready to use; water then used will be renewed automatically.

The shower head has two positions:

1 - Pull down gently; the water comes out like rain.

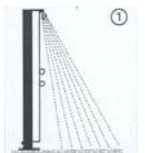

2 - Pull up gently; the water comes out as a foamy spray.





RECOMMENDATIONS FOR USAGE


When the Shower is only used sporadically: weekends, holidays, etc... its recommended to let the hot water tap run for about five minutes, so that all the water in the deposit is renewed, to allow the chlorine or other sanitary treatments to be removed from the system, since they may have lost their properties.

MAINTENANCE

During winter, you must empty the water of the system of the shower. For this, closed the stopcock and open the two taps of the shower and the back emptying cap; loosen the connector of inlet water to the shower to empty the internal pipes.



When there is realized the installation of the shower or of the pipelines of assault, normally they are in the habit of getting dirty with sand or other minerals, therefore it is probable that the filter of the sprayer of the shower could get dirty. To clean it we must follow the indication of the figure.

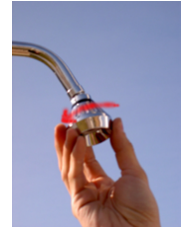

In winter, you are advised to empty the shower, dismantle it and store it in a sheltered area.

When hot water is using, the tank fill up with cold water, and due to the warming up, the volume increase and can produce that the shower slighty drip. Once heated the water, this situation stop.

Warning: This article is not guaranteed for damage incurred due to freezing, hard water or salt water.